


Measuring Techniques


Single Panel:

Measure Width X Height as precisely as possible. We will usually include extra film beyond the specified measurements for “play” room. If your design is to line up with existing architecture, i.e.; from door glass corner to the door handle, please note this requirement when ordering.

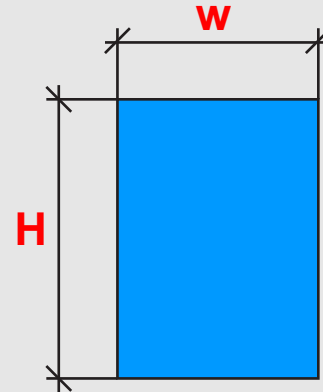

Multiple Panels:

Measure Width X Height of each individual panel precisely. Also measure any frame distance or gaps between panels precisely. Most times we will include a one (1) inch overlap in both directions for individual panel art to line up correctly from panel to panel, if applicable.

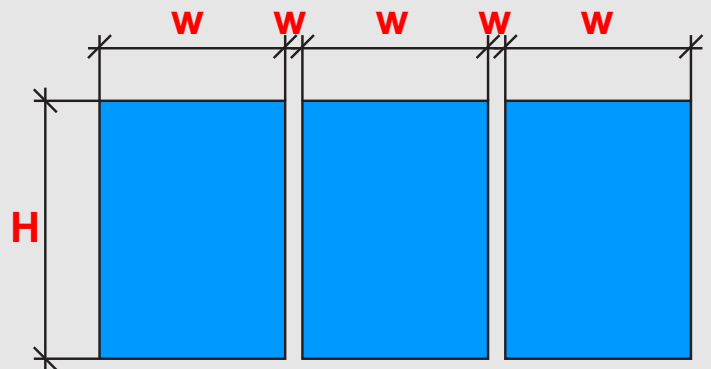

Advanced Measuring:

Advanced measuring will be required when there are complex panel arrangements that require the artwork to line up across all panels.

- 1) Each panel must be measured W X H
- 2) Any gaps, spacing, or framing between panels must be measured.
- 3) Each panel must have at least one point of origin measurement. (A great point of origin to use is the distance from the floor to the bottom of each panel.)

